

PREFITTING INSTRUCTIONS FOR WOOD DOORS



REDIFRAME

STANDARD HARDWARE PREP

RFS #	RF	KRF	RFX	HEIGHT	HINGE	STRIKE PREP	DOOR THICKNESS
1	x			6'8" 6'9" 7'0"	235	2 3/4" "T"	1 3/8" Single Door
2	x			6'8" 6'9" 7'0"	235	none	1 3/8" Single Door
3	x			6'8" 6'9" 7'0"	335	2 3/4" "T"	1 3/8" Single Door
4	x			6'8" 6'9" 7'0"	335	none	1 3/8" Single Door
5	x	x	x	6'8" 6'9" 7'0"	340	ASA or 2 3/4" "T"	1 3/4" Single Door
6	x	x	x	6'8" 6'9" 7'0"	340	none	1 3/4" Single Door
7	x			6'8" 6'9" 7'0"	235	n/a	1 3/8" Pair Door
8	x			6'8" 6'9" 7'0"	335	n/a	1 3/8" Pair Door
9	x	x	x	6'8" 6'9" 7'0"	340	n/a	1 3/4" Pair Door
17	x			7'10" 8'0" 8'4" 8'10"	435	2 3/4" "T"	1 3/8" Single Door
19	x	x	x	7'10" 8'0" 8'4" 8'10"	440	ASA or 2 3/4" "T"	1 3/4" Single Door
21	x			7'10" 8'0" 8'4" 8'10"	435	n/a	1 3/8" Pair Door
22	x	x	x	7'10" 8'0" 8'4" 8'10"	440	n/a	1 3/4" Pair Door
31	x	x	x	6'8" 6'9" 7'0"	345	ASA or 2 3/4" "T"	1 3/4" Single Door
32	x	x	x	6'8" 6'9" 7'0"	345	none	1 3/4" Single Door
33	x	x	x	6'8" 6'9" 7'0"	345	n/a	1 3/4" Pair Door
35	x	x	x	7'10" 8'0" 8'4" 8'10"	445	ASA or 2 3/4" "T"	1 3/4" Single Door
36	x	x	x	7'10" 8'0" 8'4" 8'10"	445	none	1 3/4" Single Door
37	x	x	x	7'10" 8'0" 8'4" 8'10"	445	n/a	1 3/4" Pair Door

RF410 RediFrame Prefitting Instructions for Wood Doors
Rev. 05_22



REDIFRAME

1101 Technology Drive
800.633.7553
www.dunbarton.com

Dothan, Alabama 36303
334.794.9184 fax
sales@dunbarton.com



TABLE OF CONTENTS



3	Table of Contents
4	1-3/8" Door with 1 pair 3-1/2" Hinges
5	1-3/8" Door with 1-1/2 pair 3-1/2" Hinges
6	1-3/8" Door with 2 pair 3-1/2" Hinges
7	1-3/4" Door with 1-1/2 pair 4" Hinges
8	1-3/4" Door with 2 pair 4" Hinges
9	1-3/4" Door with 1-1/2 pair 4-1/2" Hinges
10	1-3/4" Door with 2 pair 4-1/2" Hinges
11	1-3/4" Door with 1-1/2 pair 5" Hinges



1101 Technology Drive
800.633.7553
www.dunbarton.com

| Dothan, Alabama 36303
| 334.794.9184 fax
| sales@dunbarton.com




PREFITTING INSTRUCTIONS FOR WOOD DOORS



REDIFRAME

1 PAIR ON 3-1/2' HINGES FOR 1-3/8' DOORS (RFS 1, 2, 7)

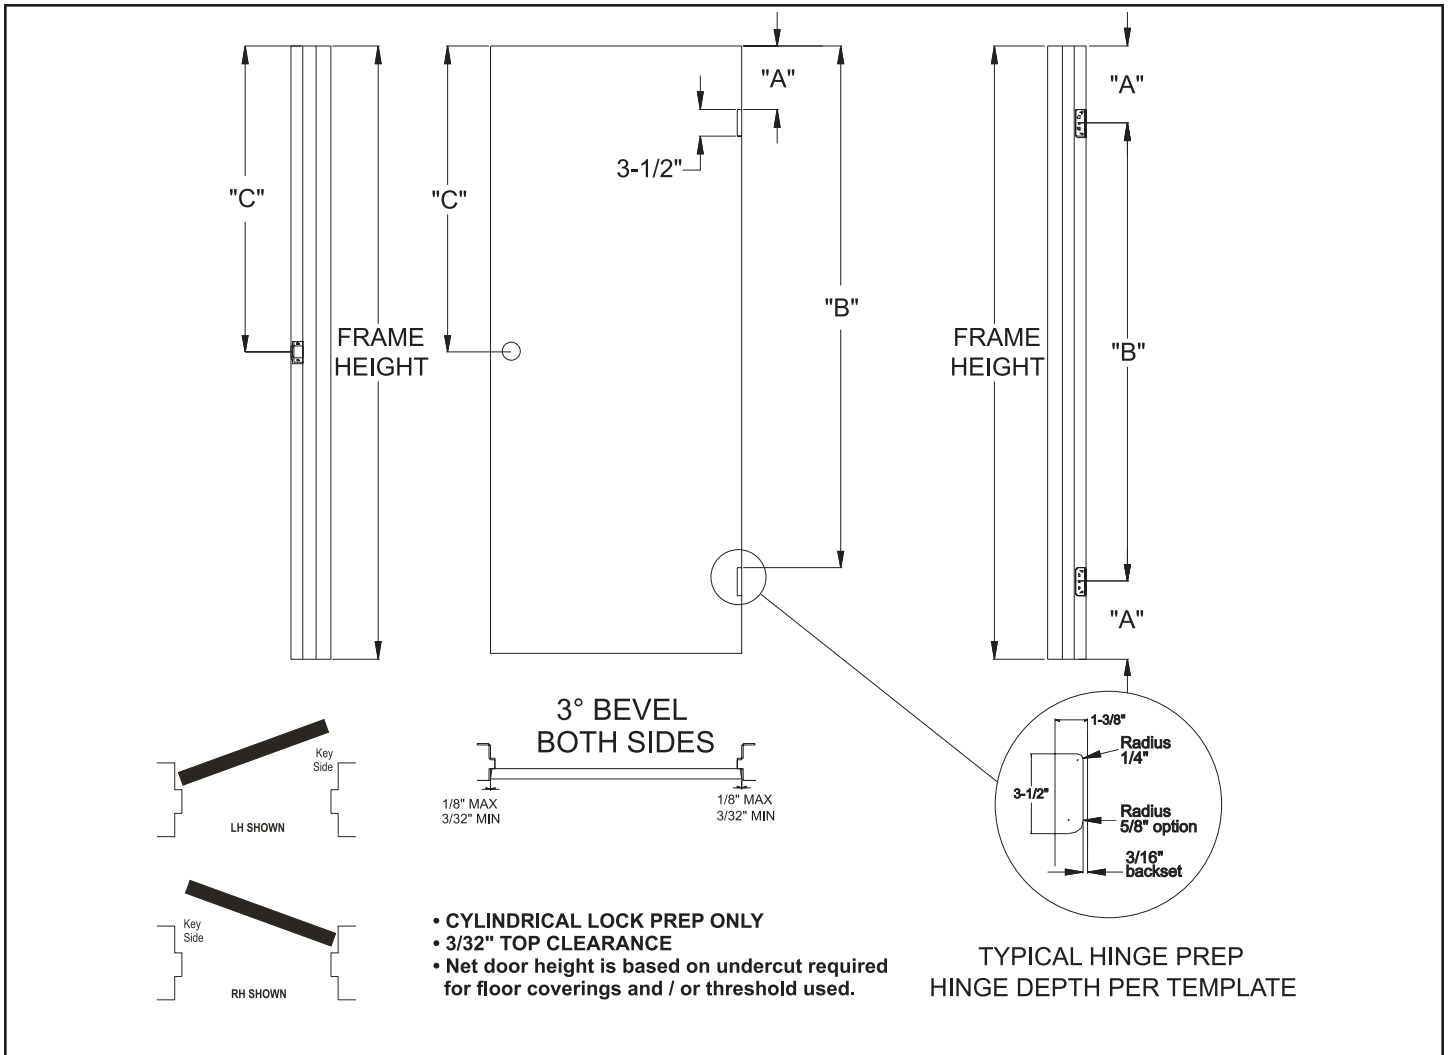

FRAME DIMENSIONS

NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"
6-8	80 3/16	10 3/32	60	40 3/32
6-9	81 3/16	10 3/32	61	41 3/32
7-0	84 3/16	10 3/32	64	44 3/32

DOOR DIMENSIONS


NET FRAME HEIGHT	"A"	"B"	"C"
80 3/16	8 1/4	68 1/4	40
81 3/16	8 1/4	69 1/4	41
81 3/16	8 1/4	69 1/4	40 1/2
84 3/16	8 1/4	72 1/4	44

PREFITTING INSTRUCTIONS FOR WOOD DOORS



REDIFRAME

1-1/2 PAIR OF 3-1/2" HINGES FOR 1-3/8" DOORS (RFS 3, 4, 8)

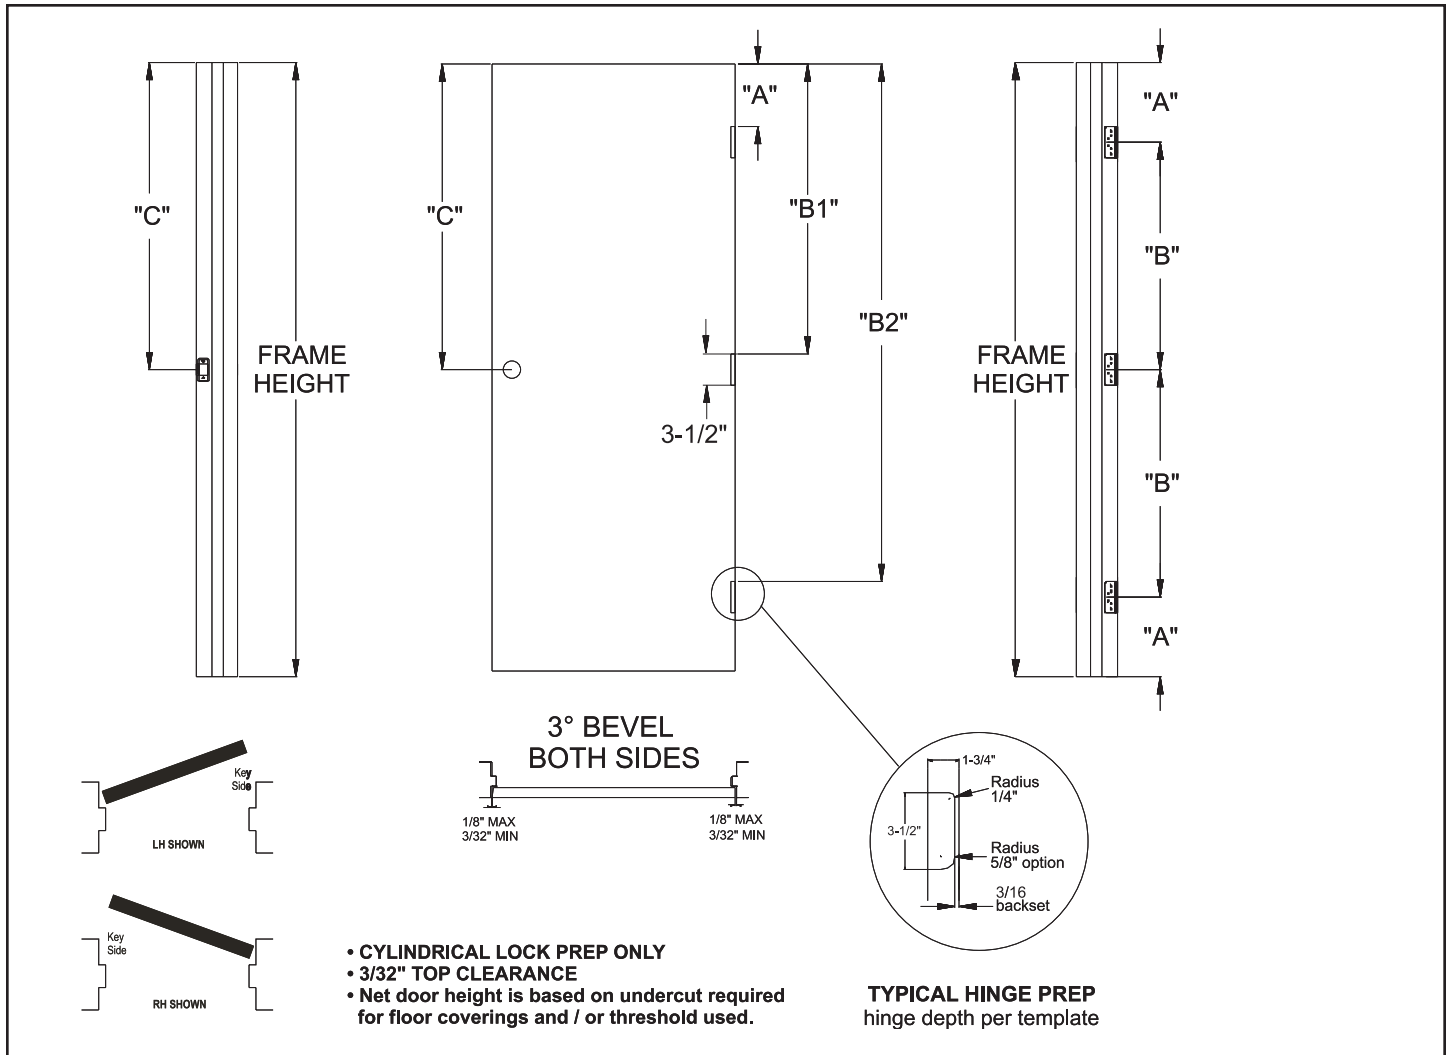

FRAME DIMENSIONS


NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"
5-0	60 3/16	10 3/32	20	20 3/32
5-1	61 3/16	10 3/32	20 1/2	21 3/32
5-2	62 3/16	10 3/32	21	22 3/32
5-4	64 3/16	10 3/32	22	24 3/32
6-0	72 3/16	10 3/32	26	32 3/32
6-8	80 3/16	10 3/32	30	40 3/32
6-9	81 3/16	10 3/32	30 1/2	41 3/32
7-0	84 3/16	10 3/32	32	44 3/32
7-4	88 3/16	10 3/32	34	48 3/32
7-6	90 3/16	10 3/32	35	50 3/32

DOOR DIMENSIONS

NET FRAME HEIGHT	"A"	"B1"	"B2"	"C"
60 3/16	8 1/4	28 1/4	48 1/4	20
61 3/16	8 1/4	28 3/4	49 1/4	21
62 3/16	8 1/4	29 1/4	50 1/4	22
64 3/16	8 1/4	30 1/4	52 1/4	24
72 3/16	8 1/4	34 1/4	60 1/4	32
80 3/16	8 1/4	38 1/4	68 1/4	40
81 3/16	8 1/4	38 3/4	69 1/4	41
81 3/16	8 1/4	38 3/4	69 1/4	40 1/2
84 3/16	8 1/4	40 1/4	72 1/4	44
84 3/16	8 1/4	40 1/4	72 1/4	42
88 3/16	8 1/4	42 1/4	76 1/4	48
90 3/16	8 1/4	43 1/4	78 1/4	50

PREFITTING INSTRUCTIONS FOR WOOD DOORS

2 PAIR OF 3-1/2" HINGES FOR 1-3/8" DOORS (RFS 17, 21)

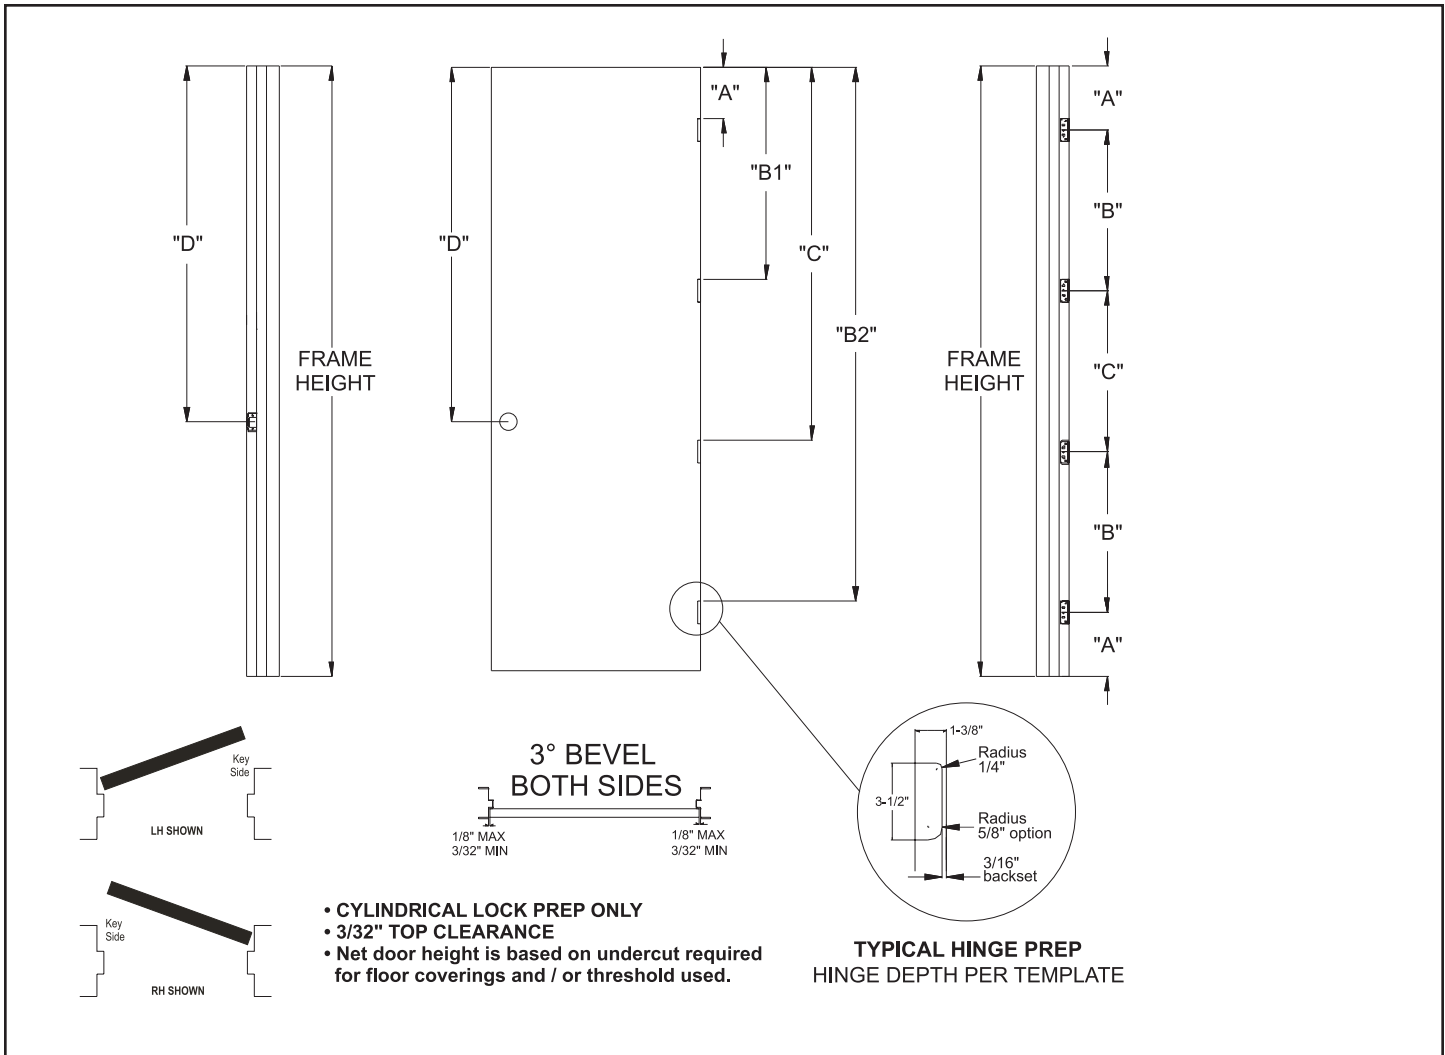

FRAME DIMENSIONS					
NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"	"D"
6-0	72 3/16	10 3/32	17 1/4	17 1/2	32 3/32
6-8	80 3/16	10 3/32	20	20	40 3/32
6-9	81 3/16	10 3/32	20 1/4	20 1/2	41 3/32
6-10	82 3/16	10 3/32	20 1/2	21	42 3/32
7-0	84 3/16	10 3/32	21 1/4	21 1/2	44 3/32
7-2	86 3/16	10 3/32	22	22	46 3/32
7-4	88 3/16	10 3/32	22 1/2	23	48 3/32
7-6	90 3/16	10 3/32	23 1/4	23 1/2	50 3/32
7-8	92 3/16	10 3/32	24	24	52 3/32
7-10	94 3/16	10 3/32	24 1/2	25	54 3/32
8-0	96 3/16	10 3/32	25 1/4	25 1/2	56 3/32
8-2	98 3/16	10 3/32	26	26	58 3/32
8-4	100 3/16	10 3/32	26 1/2	27	60 3/32
8-6	102 3/16	10 3/32	27 1/4	27 1/2	62 3/32
8-8	104 3/16	10 3/32	28	28	64 3/32
8-10	106 3/16	10 3/32	28 1/2	29	66 3/32
9-0	108 3/16	10 3/32	29 1/4	29 1/2	68 3/32


DOOR DIMENSIONS					
NET FRAME HEIGHT	"A"	"B1"	"C"	"B2"	"D"
72 3/16	8 1/4	25 1/2	43	60 1/4	32
80 3/16	8 1/4	28 1/4	48 1/4	68 1/4	40
81 3/16	8 1/4	28 1/2	49	69 1/4	41
82 3/16	8 1/4	28 1/2	49	69 1/4	40 1/2
84 3/16	8 1/4	29 1/2	51	72 1/4	44
84 3/16	8 1/4	29 1/2	51	72 1/4	42
86 3/16	8 1/4	30 1/4	52 1/4	74 1/4	46
88 3/16	8 1/4	30 3/4	53 3/4	76 1/4	48
90 3/16	8 1/4	31 1/2	55	78 1/4	50
92 3/16	8 1/4	32 1/4	56 1/4	80 1/4	52
94 3/16	8 1/4	32 3/4	57 3/4	82 1/4	54
96 3/16	8 1/4	33 1/2	59	84 1/4	56
98 3/16	8 1/4	34 1/4	60 1/4	86 1/4	58
100 3/16	8 1/4	34 3/4	61 3/4	88 1/4	60
102 3/16	8 1/4	35 1/2	63	90 1/4	62
104 3/16	8 1/4	36 1/4	64 1/4	92 1/4	64
106 3/16	8 1/4	36 3/4	65 3/4	94 1/4	66
108 3/16	8 1/4	37 1/2	67	96 1/4	68

PREFITTING INSTRUCTIONS FOR WOOD DOORS



REDIFRAME
Your Complete Opening Solution

1-1/2 PAIR OF 4" HINGES FOR 1-3/4" DOORS (RFS 5, 6, 9)

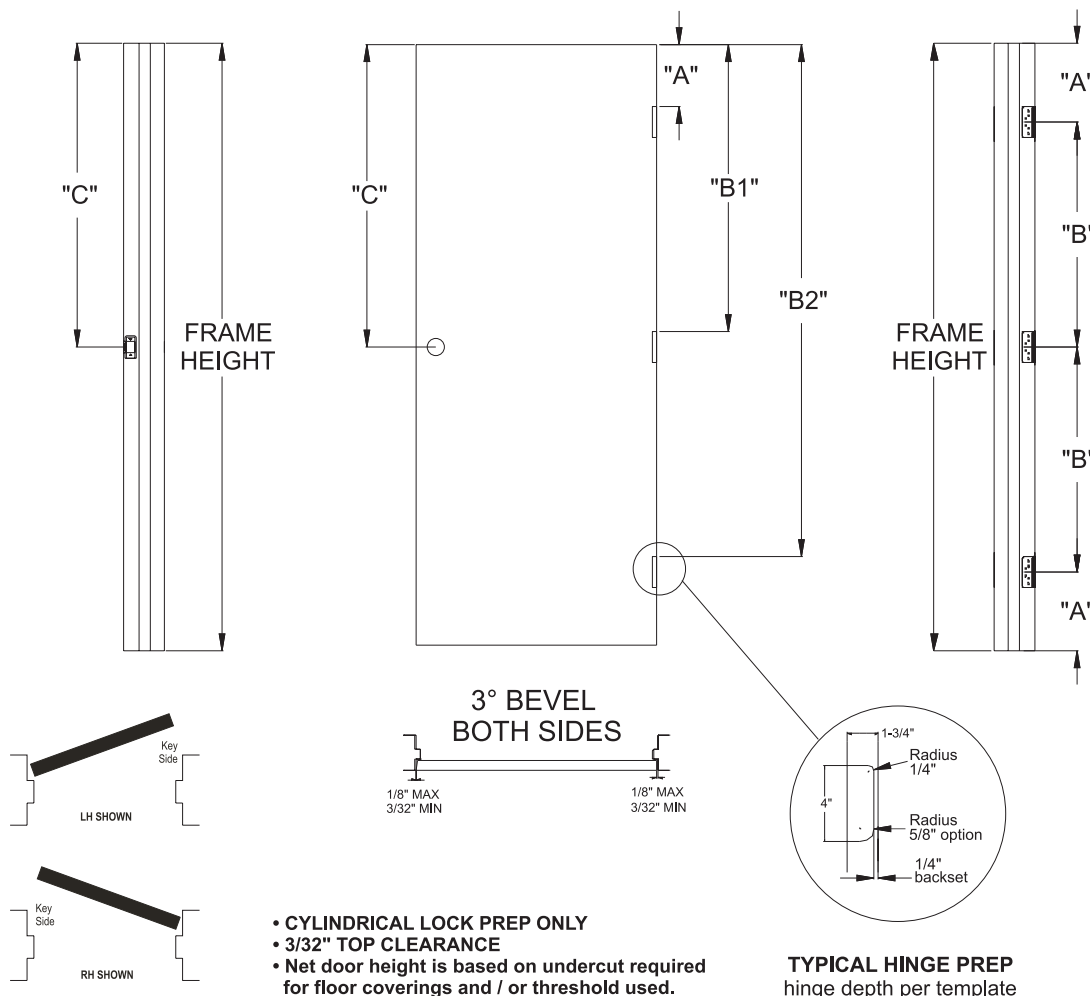

FRAME DIMENSIONS

NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"
5-0	60 3/16	10 11/32	19 3/4	20 3/32
5-1	61 3/16	10 11/32	20 1/4	21 3/32
5-2	62 3/16	10 11/32	20 3/4	22 3/32
5-4	64 3/16	10 11/32	21 3/4	24 3/32
6-0	72 3/16	10 11/32	25 3/4	32 3/32
6-8	80 3/16	10 11/32	29 3/4	40 3/32
6-9	81 3/16	10 11/32	30 1/4	41 3/32
7-0	84 3/16	10 11/32	31 3/4	44 3/32
7-4	88 3/16	10 11/32	33 3/4	48 3/32
7-6	90 3/16	10 11/32	34 3/4	50 3/32

DOOR DIMENSIONS


NET FRAME HEIGHT	"A"	"B1"	"B2"	"C"
60 3/16	8 1/4	28	47 3/4	20
61 3/16	8 1/4	28 1/2	48 3/4	21
62 3/16	8 1/4	29	49 3/4	22
64 3/16	8 1/4	30	51 3/4	24
72 3/16	8 1/4	34	59 3/4	32
80 3/16	8 1/4	38	67 3/4	40
81 3/16	8 1/4	38 1/2	68 3/4	41
81 3/16	8 1/4	38 1/2	68 3/4	40 1/2
84 3/16	8 1/4	40	71 3/4	44
84 3/16	8 1/4	40	71 3/4	42
88 3/16	8 1/4	42	75 3/4	48
90 3/16	8 1/4	43	77 3/4	50

PREFITTING INSTRUCTIONS FOR WOOD DOORS



REDIFRAME
Your Complete Opening Solution

2 PAIR OF 4" HINGES FOR 1-3/4" DOORS (RFS 19, RFS 22)

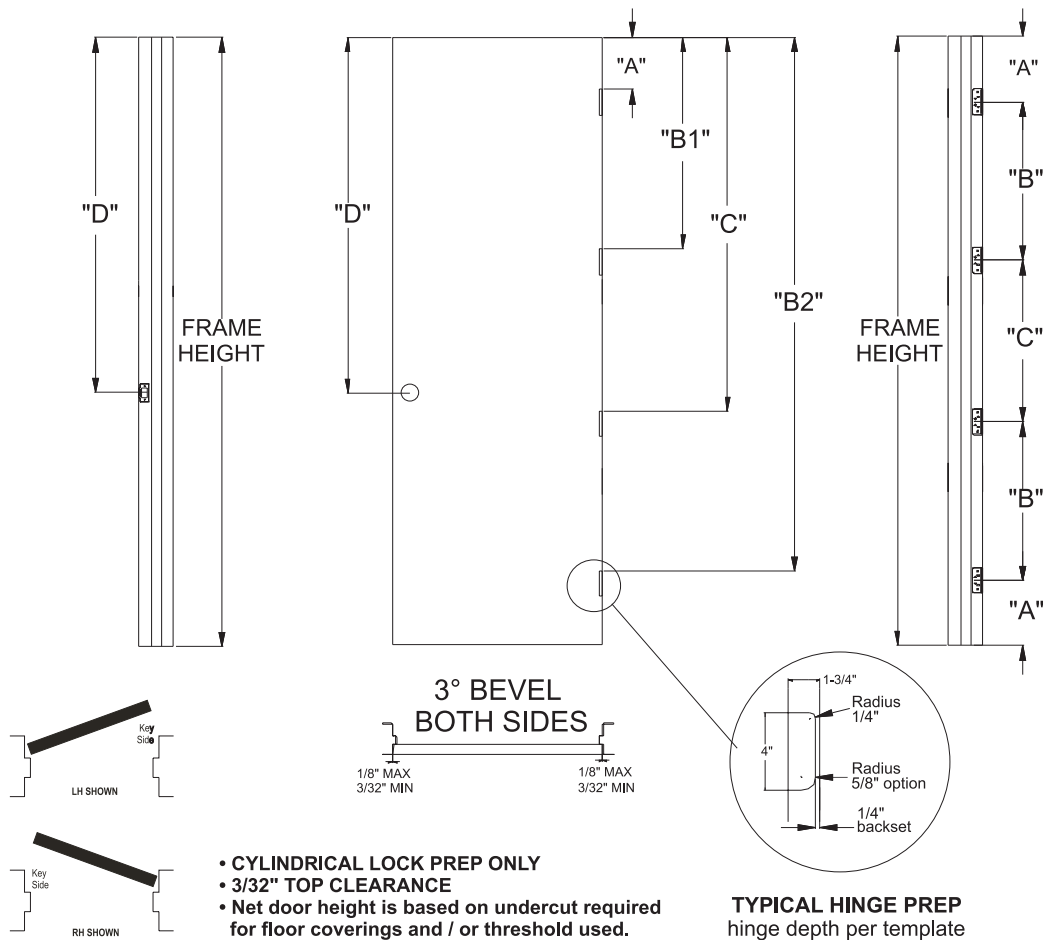

FRAME DIMENSIONS

NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"	"D"
6-0	72 3/16	10 11/32	17	17 1/2	32 3/32
6-8	80 3/16	10 11/32	19 3/4	20	40 3/32
6-9	81 3/16	10 11/32	20 1/8	20 1/4	41 3/32
6-10	82 3/16	10 11/32	20 1/2	20 1/2	42 3/32
7-0	84 3/16	10 11/32	21	21 1/2	44 3/32
7-2	86 3/16	10 11/32	21 3/4	22	46 3/32
7-4	88 3/16	10 11/32	22 1/2	22 1/2	48 3/32
7-6	90 3/16	10 11/32	23	23 1/2	50 3/32
7-8	92 3/16	10 11/32	23 3/4	24	52 3/32
7-10	94 3/16	10 11/32	24 1/2	24 1/2	54 3/32
8-0	96 3/16	10 11/32	25	25 1/2	56 3/32
8-2	98 3/16	10 11/32	25 3/4	26	58 3/32
8-4	100 3/16	10 11/32	26 1/2	26 1/2	60 3/32
8-6	102 3/16	10 11/32	27	27 1/2	62 3/32
8-8	104 3/16	10 11/32	27 3/4	28	64 3/32
8-10	106 3/16	10 11/32	28 1/2	28 1/2	66 3/32
9-0	108 3/16	10 11/32	29	29 1/2	68 3/32

DOOR DIMENSIONS


NET FRAME HEIGHT	"A"	"B1"	"C"	"B2"	"D"
72 3/16	8 1/4	25 1/4	42 3/4	59 3/4	32
80 3/16	8 1/4	28	48	67 3/4	40
81 3/16	8 1/4	28 3/8	48 5/8	68 3/4	41
81 3/16	8 1/4	28 3/8	48 5/8	68 3/4	40 1/2
82 3/16	8 1/4	28 3/4	49 1/4	69 3/4	42
84 3/16	8 1/4	29 1/4	50 3/4	71 3/4	44
84 3/16	8 1/4	29 1/4	50 3/4	71 3/4	42
86 3/16	8 1/4	30	52	73 3/4	46
88 3/16	8 1/4	30 3/4	53 1/4	75 3/4	48
90 3/16	8 1/4	31 1/4	54 3/4	77 3/4	50
92 3/16	8 1/4	32	56	79 3/4	52
94 3/16	8 1/4	32 3/4	57 1/4	81 3/4	54
96 3/16	8 1/4	33 1/4	58 3/4	83 3/4	56
98 3/16	8 1/4	34	60	85 3/4	58
100 3/16	8 1/4	34 3/4	61 1/4	87 3/4	60
102 3/16	8 1/4	35 1/4	62 3/4	89 3/4	62
104 3/16	8 1/4	36	64	91 3/4	64
106 3/16	8 1/4	36 3/4	65 1/4	93 3/4	66
108 3/16	8 1/4	37 1/4	66 3/4	95 3/4	68

PREFITTING INSTRUCTIONS FOR WOOD DOORS



REDIFRAME

1-1/2 PAIR OF 4-1/2" (114) HINGES FOR 1-3/4" DOORS (RFS 31, RFS 32, RFS 33)

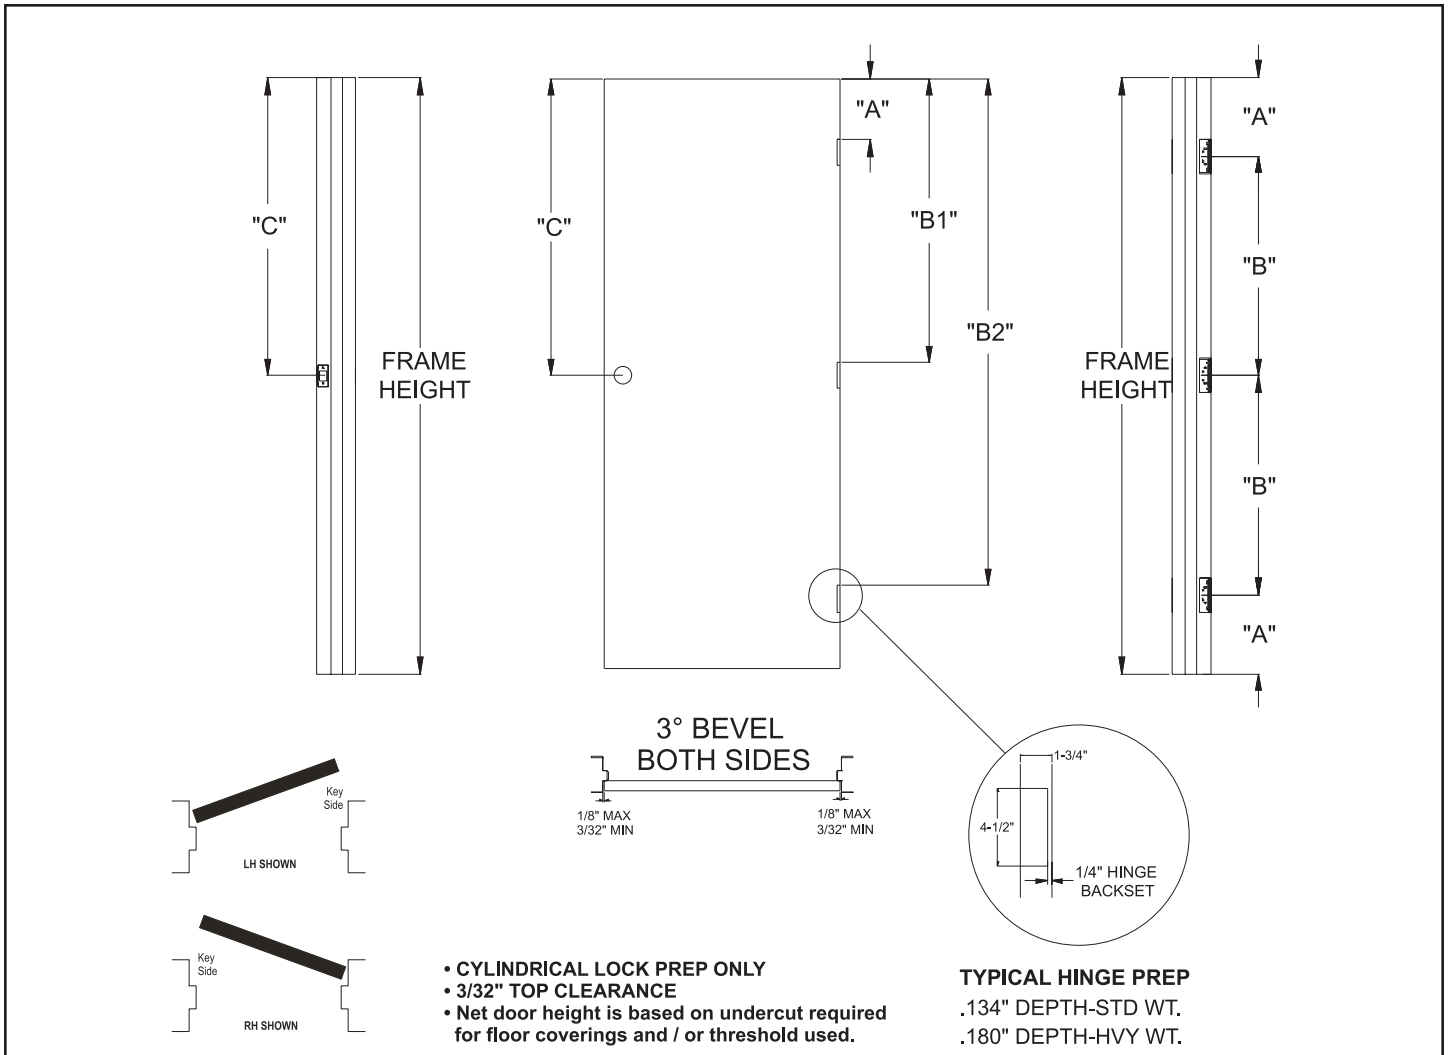

FRAME DIMENSIONS

NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"
5-0	60 3/16	10 19/32	19 1/2	20 3/32
5-1	61 3/16	10 19/32	20	21 3/32
5-2	62 3/16	10 19/32	20 1/2	22 3/32
5-4	64 3/16	10 19/32	21 1/2	24 3/32
6-0	72 3/16	10 19/32	25 1/2	32 3/32
6-8	80 3/16	10 19/32	29 1/2	40 3/32
6-9	81 3/16	10 19/32	30	41 3/32
7-0	84 3/16	10 19/32	31 1/2	44 3/32
7-4	88 3/16	10 19/32	33 1/2	48 3/32
7-6	90 3/16	10 19/32	34 1/2	50 3/32

DOOR DIMENSIONS


NET FRAME HEIGHT	"A"	"B1"	"B2"	"C"
60 3/16	8 1/4	27 3/4	47 1/4	20
61 3/16	8 1/4	28 1/4	48 1/4	21
62 3/16	8 1/4	28 3/4	49 1/4	22
64 3/16	8 1/4	29 3/4	51 1/4	24
72 3/16	8 1/4	33 3/4	59 1/4	32
80 3/16	8 1/4	37 3/4	67 1/4	40
81 3/16	8 1/4	38 1/4	68 1/4	41
81 3/16	8 1/4	38 1/4	68 1/4	40 1/2
84 3/16	8 1/4	39 3/4	71 1/4	44
84 3/16	8 1/4	39 3/4	71 1/4	42
88 3/16	8 1/4	41 3/4	75 1/4	48
90 3/16	8 1/4	42 3/4	77 1/4	50

PREFITTING INSTRUCTIONS FOR WOOD DOORS



REDIFRAME

2 PAIR OF 4-1/2" (114) HINGES FOR 1-3/4" DOORS (RFS 35, RFS 36, RFS 37)

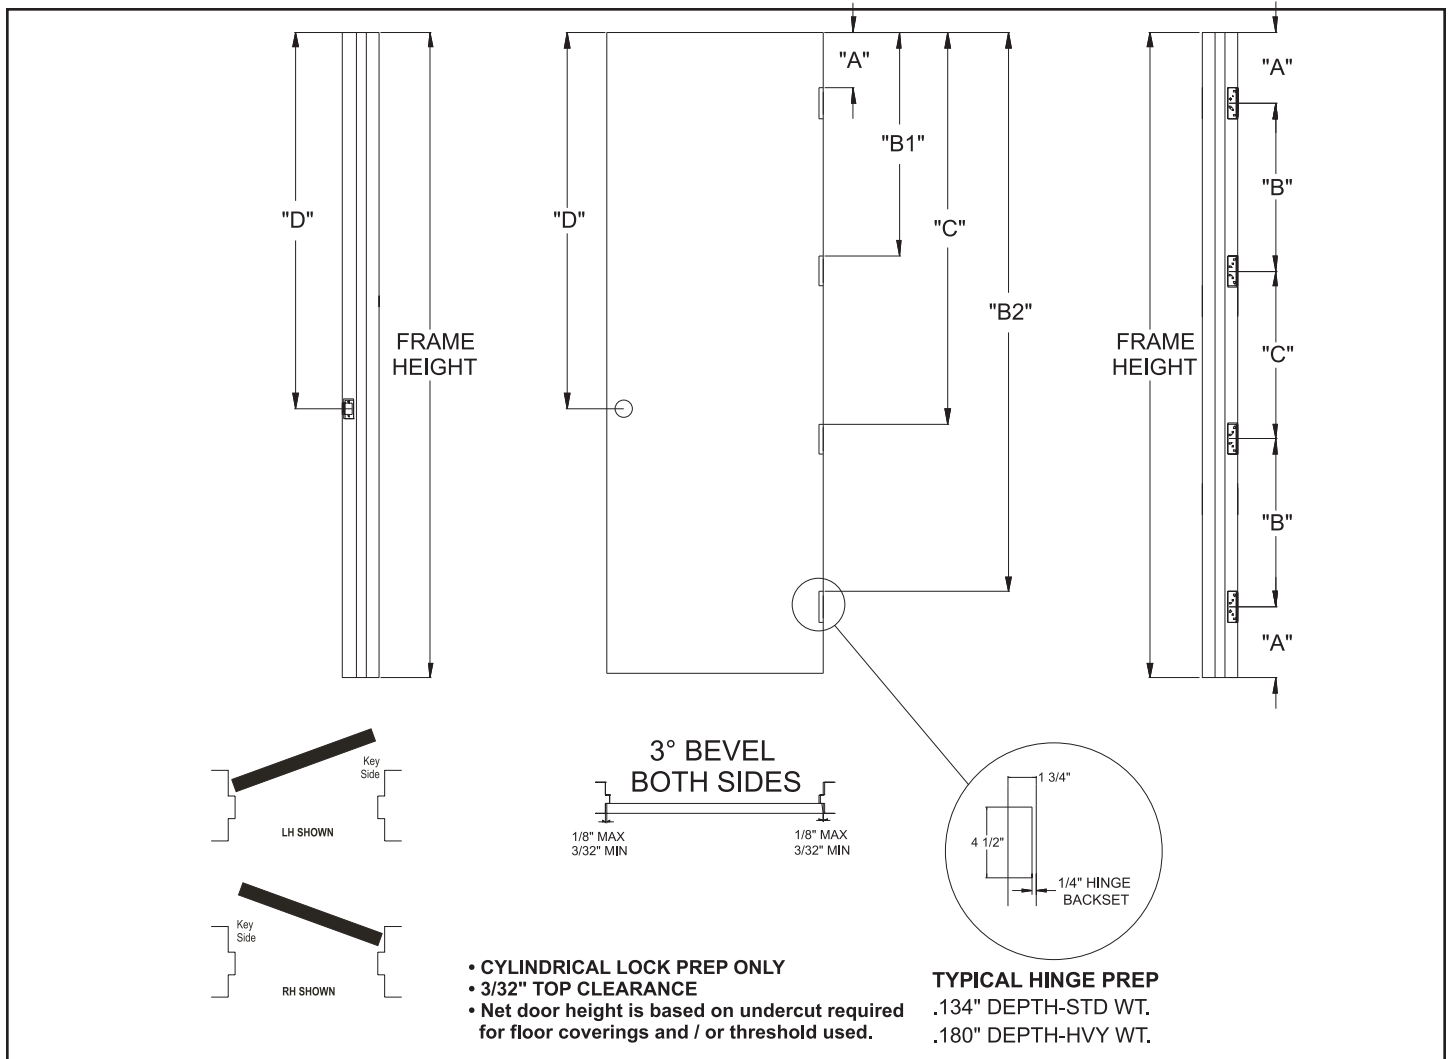


FRAME DIMENSIONS					
NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"	"D"
6-0	72 3/16	10 19/32	17	17	32 3/32
6-8	80 3/16	10 19/32	19 1/2	20	40 3/32
6-9	81 3/16	10 19/32	20	20	41 3/32
6-10	82 3/16	10 19/32	20 1/4	20 1/2	42 3/32
7-0	84 3/16	10 19/32	21	21	44 3/32
7-2	86 3/16	10 19/32	21 1/2	22	46 3/32
7-4	88 3/16	10 19/32	22 1/4	22 1/2	48 3/32
7-6	90 3/16	10 19/32	23	23	50 3/32
7-8	92 3/16	10 19/32	23 1/2	24	52 3/32
7-10	94 3/16	10 19/32	24 1/2	24	54 3/32
8-0	96 3/16	10 19/32	25	25	56 3/32
8-2	98 3/16	10 19/32	25 1/2	26	58 3/32
8-4	100 3/16	10 19/32	26 1/4	26 1/2	60 3/32
8-6	102 3/16	10 19/32	27	27	62 3/32
8-8	104 3/16	10 19/32	27 1/2	28	64 3/32
8-10	106 3/16	10 19/32	28 1/2	28	66 3/32
9-0	108 3/16	10 19/32	29	29	68 3/32

DOOR DIMENSIONS					
NET FRAME HEIGHT	"A"	"B1"	"C"	"B2"	"D"
72 3/16	8 1/4	25 1/4	42 1/4	59 1/4	32
80 3/16	8 1/4	27 3/4	47 3/4	67 1/4	40
81 3/16	8 1/4	28 1/4	48 1/4	68 1/4	41
81 3/16	8 1/4	28 1/4	48 1/4	68 1/4	40 1/2
82 3/16	8 1/4	28 1/2	49	69 1/4	42
84 3/16	8 1/4	29 1/4	50 1/4	71 1/4	44
84 3/16	8 1/4	29 1/4	50 1/4	71 1/4	42
86 3/16	8 1/4	29 3/4	51 3/4	73 1/4	46
88 3/16	8 1/4	30 1/2	53	75 1/4	48
90 3/16	8 1/4	31 1/4	54 1/4	77 1/4	50
92 3/16	8 1/4	31 3/4	55 3/4	79 1/4	52
94 3/16	8 1/4	32 3/4	56 3/4	81 1/4	54
96 3/16	8 1/4	33 1/4	58 1/4	83 1/4	56
98 3/16	8 1/4	33 3/4	59 3/4	85 1/4	58
100 3/16	8 1/4	34 1/2	61	87 1/4	60
102 3/16	8 1/4	35 1/4	62 1/4	89 1/4	62
104 3/16	8 1/4	35 3/4	63 3/4	91 1/4	64
106 3/16	8 1/4	36 3/4	64 3/4	93 1/4	66
108 3/16	8 1/4	37 1/4	66 1/4	95 1/4	68

PREFITTING INSTRUCTIONS FOR WOOD DOORS



1-1/2 PAIR OF 5" (127) HINGES FOR 1-3/4" DOORS

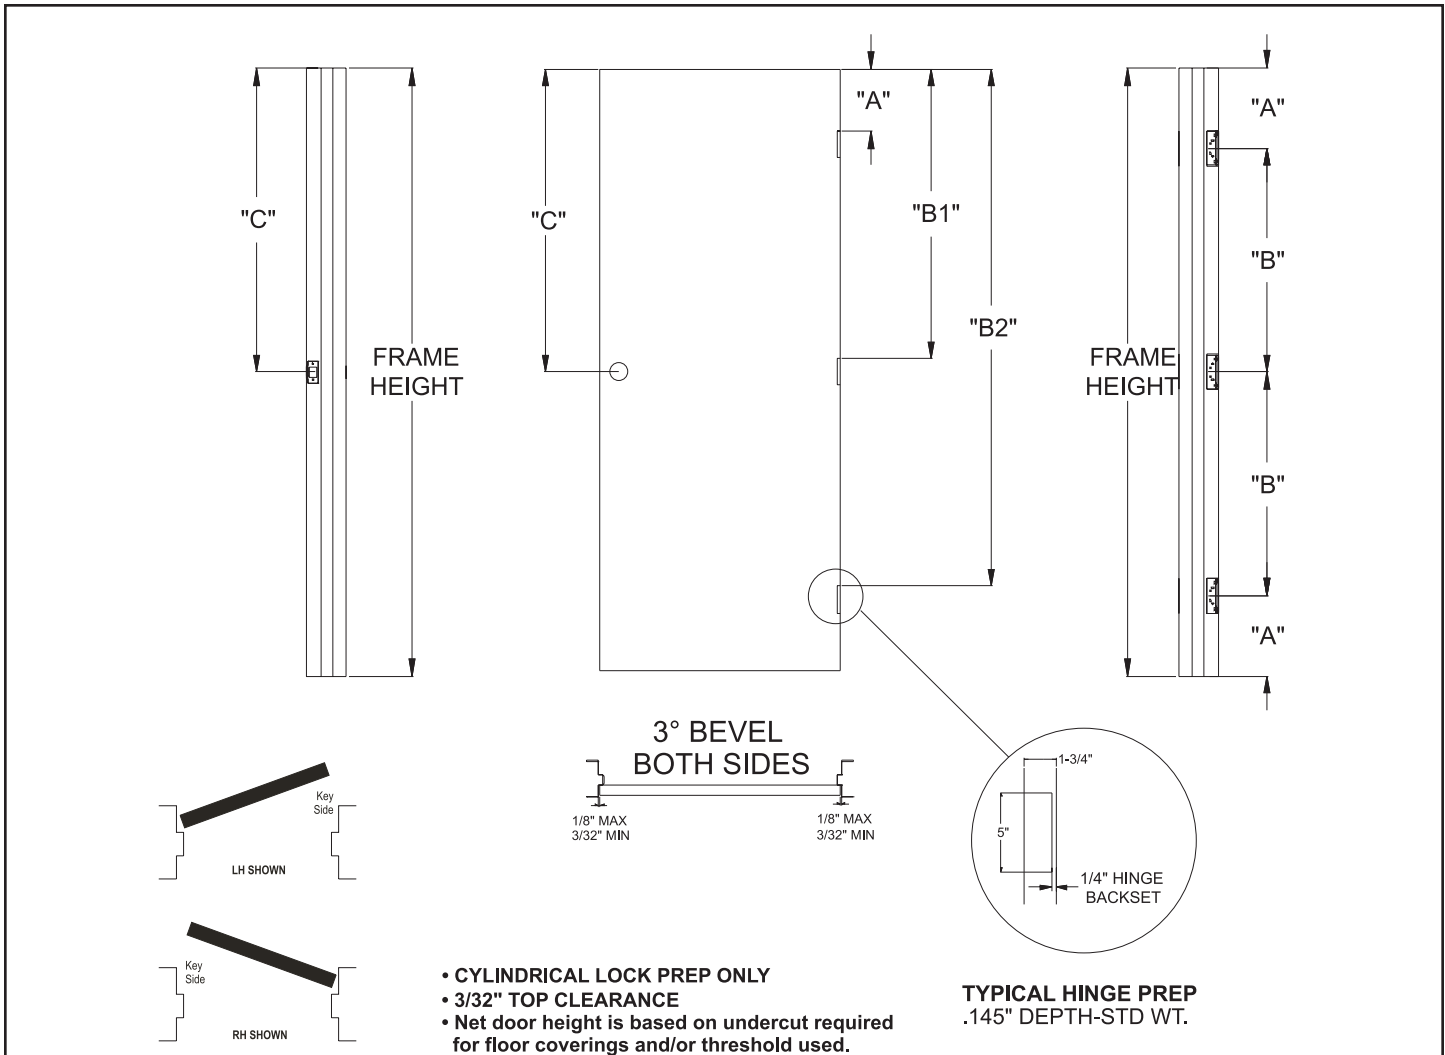

FRAME DIMENSIONS

NOM FRAME HT	NET FRAME HEIGHT	"A"	"B"	"C"
5-0	60 3/16	10 27/32	19 1/4	20 3/32
5-1	61 3/16	10 27/32	19 3/4	21 3/32
5-2	62 3/16	10 27/32	20 1/4	22 3/32
5-4	64 3/16	10 27/32	21 1/4	24 3/32
6-0	72 3/16	10 27/32	25 1/4	32 3/32
6-8	80 3/16	10 27/32	29 1/4	40 3/32
6-9	81 3/16	10 27/32	29 3/4	41 3/32
7-0	84 3/16	10 27/32	31 1/4	44 3/32
7-4	88 3/16	10 27/32	33 1/4	48 3/32
7-6	90 3/16	10 27/32	34 1/4	50 3/32

DOOR DIMENSIONS

NET FRAME HEIGHT	"A"	"B1"	"B2"	"C"
60 3/16	8 1/4	27 1/2	46 3/4	20
61 3/16	8 1/4	28	47 3/4	21
62 3/16	8 1/4	28 1/2	48 3/4	22
64 3/16	8 1/4	29 1/2	50 3/4	24
72 3/16	8 1/4	33 1/2	58 3/4	32
80 3/16	8 1/4	37 1/2	66 3/4	40
81 3/16	8 1/4	38	67 3/4	41
81 3/16	8 1/4	38	67 3/4	40 1/2
84 3/16	8 1/4	39 1/2	70 3/4	44
84 3/16	8 1/4	39 1/2	70 3/4	42
88 3/16	8 1/4	41 1/2	74 3/4	48
90 3/16	8 1/4	42 1/2	76 3/4	50



1101 Technology Drive | Dothan, Alabama 36303
800.633.7553 | 334.794.9184 fax
www.dunbarton.com | sales@dunbarton.com

